



MW 63-160A

N0064EQ401_02

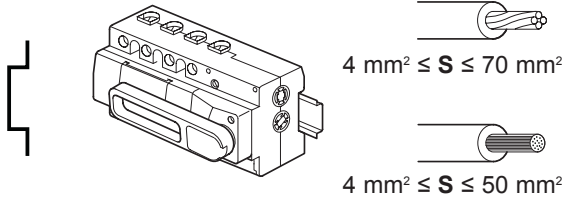

100 - 125 - 160 A


(mm)	3P	4P
A	26,7	26,7
B	133	160
C	91	91
D	83	83
E	63	63
F	45	45
G	16	16
H	44	44
I	99	66
J	22,5	22,5
K	24	24
L	6	6
M	22	22
N	22,5	22,5
O	58	58
P	71,5	71,5
Q maxi	523	523
Q mini	114	114
R	91	91
S	96	96
T	118,5	118,5
U maxi	66	66
U mini	63	63
W	26,7	26,7
Z	8	8

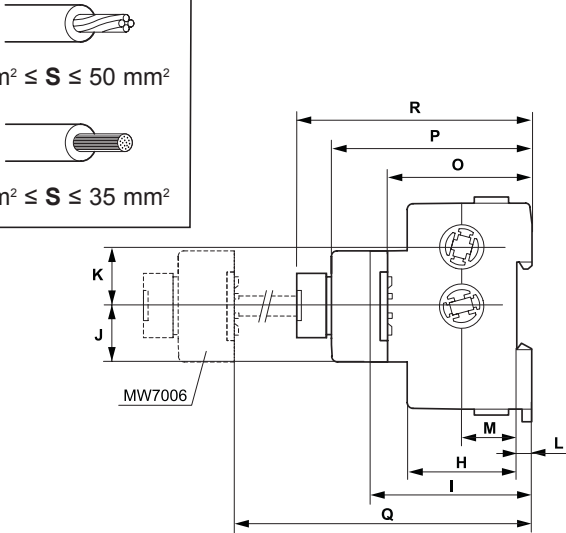


63 A

(mm)	3P/4P
A	17,7
B	125
C	93
D	83
E	63
F	45
G	16
H	44
I	66
J	22,5
K	24
L	6
M	22
N	22,5
O	58
P	71,5
Q maxi	523
Q mini	114
R	91
S	96


100 - 125 - 160 A

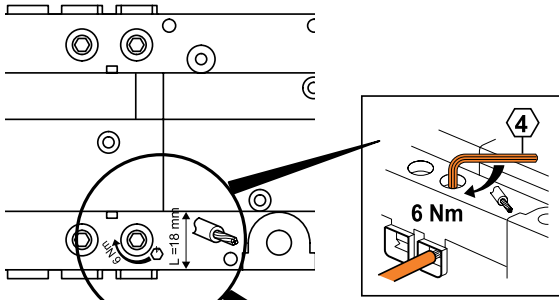



63 A

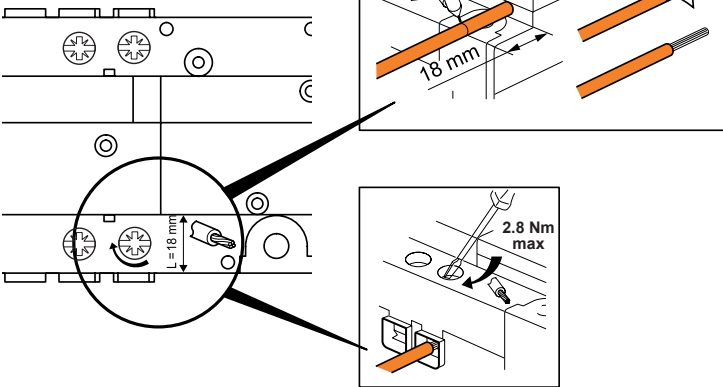

63 - 100 - 125 - 160 A

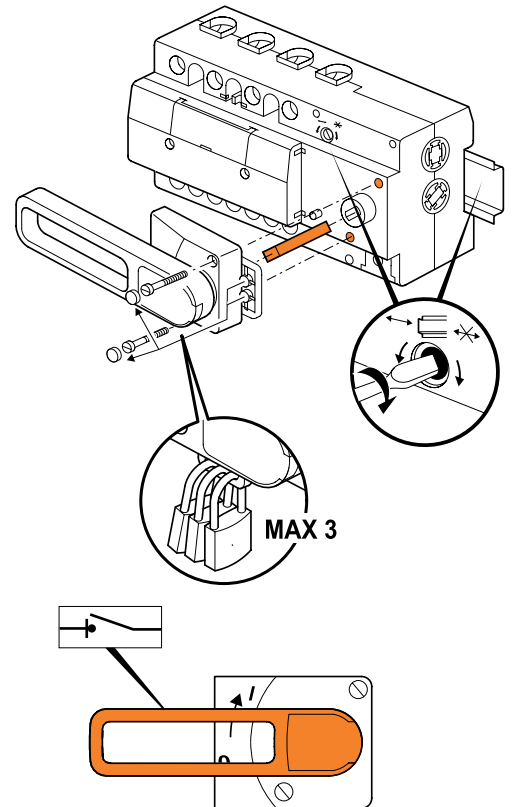

Montaggio del contatto ausiliario
Installation der Hilfskontakte
Montage des contacts auxiliaires
Installing the auxiliary contacts

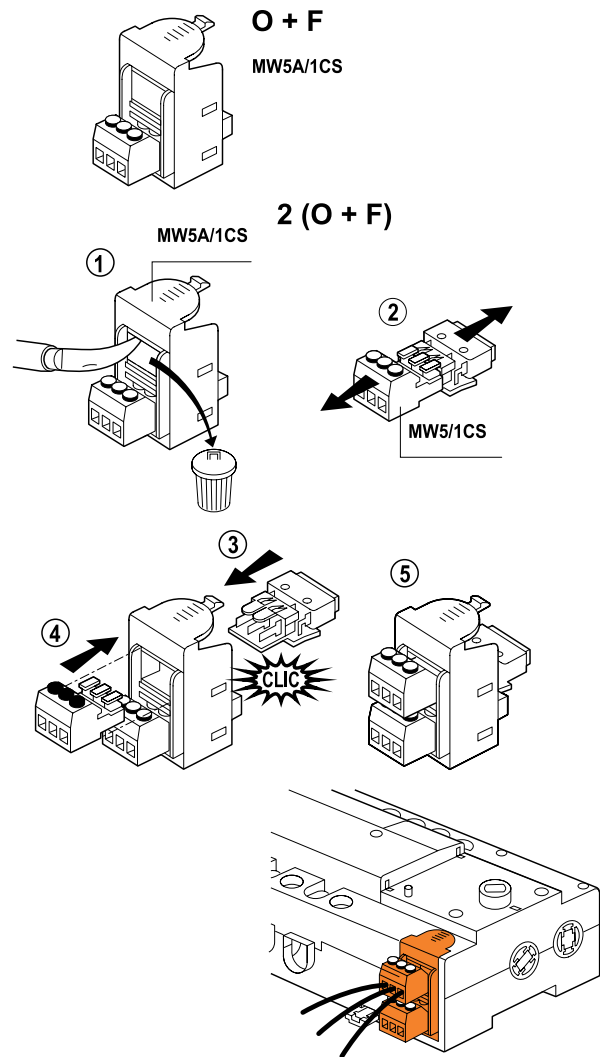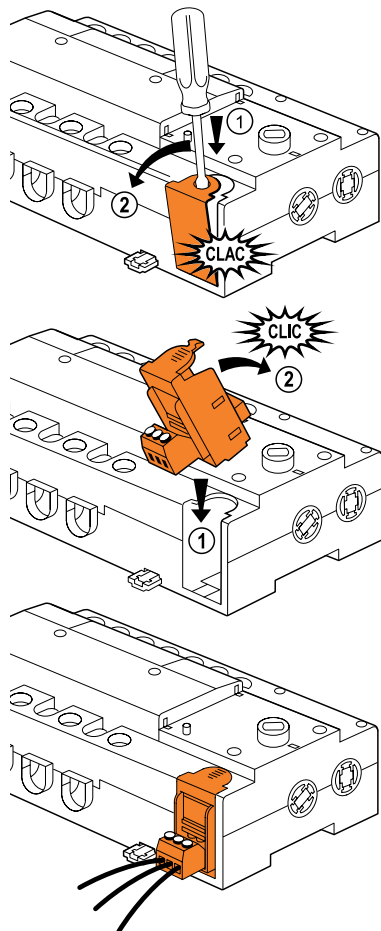

O + F
MW5A/1CS

2 (O + F)
MW5/1CS