


BTICINO > Wiring devices > Solutions for healthcare establishment > Call system

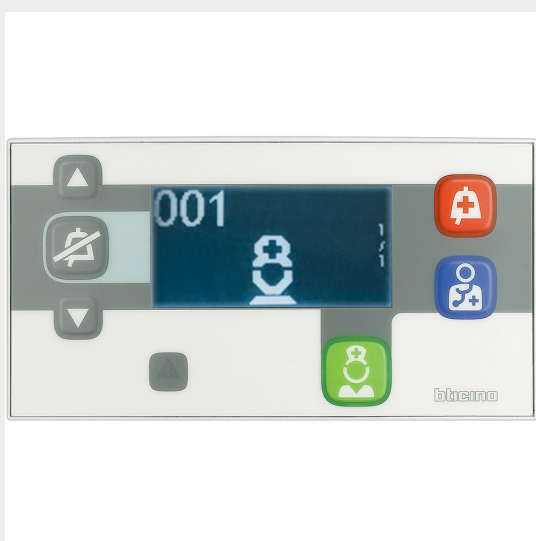


CMTE1200

Room terminal with display. The device has three buttons backlit to activate the presence of staff , to the call for help and require the intervention of medical personnel. A backlit graphic display allows the signaling of states and events both inside the room is the other room if staff is present. Two buttons are used to make scroll through all calls in progress from from other rooms . Combined with sound module CMTE3000 , and in the presence of personnel nursing , allows you to communicate with other rooms or with the local garrison , ensuring Full relocation of functionality garrison . Includes support for installation. Device in antibacterial material

Technical features

Brand	BTicino
Standard reference	VDE0834-1-2 (DIN 41050)
Rated voltage	BUS/SCS
Protection index	IP42
Height	80mm
Width	150mm
Depth	27.8mm

Documentation

 [_DWG drawing_](#)

Related products



CMAI1020

Terminal support wall
surface mount

We, BTicino S.p.A Viale Borri 231 21100 Varese (Italy), declare that all items listed in BTicino catalogues, have been manufactured in compliance with the principal elements of safety objectives of European Directive said LVD: 2014/35/EU: 26 February 2014 and, where requested, also in compliance with essential protection requirements of electromagnetic compatibility according to European Directive 2014/30/EU: 26 February 2014, and/or where requested also in compliance with 1995/5/CE: 9 March 1999 "R&TTE" or where requested also in compliance with 2014/53/EU: 16 April 2014 "RED". BTicino S.p.A. products are in compliance with the standard published by the International Electrotechnical Commission (IEC). The compliance can be proved by Certificates issued by organizations recognized by IEC according to the CB-scheme. Our items comply with relevant European Product- Standards and show, whether provided, CE marking, they have been constructed in accordance with good engineering practice in safety matters in force in the Community, they do not endanger the safety of persons, domestic animals or property when properly installed and maintained and used in applications for which they were made.

Source page: <https://catalogue.bticino.com/BTI-CMTE1200-EN>